



INSTALLATION INSTRUCTIONS

PEHCPRD Series Power Exhaust for York 3 - 12½ Ton Units

Before Starting Installation

Warning

Severe injury can result from incorrect servicing. Only qualified HVAC service personnel should install, troubleshoot, repair or service HVAC and related HVAC equipment.

Always disconnect power before servicing. Please note some installation configurations may have more than one disconnect.

Important

Always follow all local building electrical codes.

6½ to 8½ Tons

Voltage	ProVent P/N		External Static Pressure (Inch W.G.)				FLA	Hp
			0.1	0.2	0.3	0.4		
208/230V/3Ph	PEHCPRD3761DB25C PEHCPRD3761EN25C	PEHCPRD3761DB25M PEHCPRD3761EN25M	2,400 CFM	2,200 CFM	2,000 CFM	1,800 CFM	3.2	1
460V/3Ph	PEHCPRD3761DB46C PEHCPRD3761EN46C	PEHCPRD3761DB46M PEHCPRD3761EN46M					1.6	

6½ to 8½ Tons

Voltage	ProVent P/N		External Static Pressure (Inch W.G.)				FLA	Hp
			0.1	0.2	0.3	0.4		
208/230V/3Ph	PEHCPRDSCDB25C PEHCPRDSCEN25C	PEHCPRDSCDB25M PEHCPRDSCEN25M	3,300 CFM	3,090 CFM	2,930 CFM	2,685 CFM	3.2	1
460V/3Ph	PEHCPRDSCDB46C PEHCPRDSCEN46C	PEHCPRDSCDB46M PEHCPRDSCEN46M					1.6	

10 to 12½ Tons



Voltage	ProVent P/N		External Static Pressure (Inch W.G.)				FLA	Hp
			0.1	0.2	0.3	0.4		
208/230V/3Ph	PEHCPRDLADB25C PEHCPRDLACEN25C	PEHCPRDLADB25M PEHCPRDLACEN25M	4,200 CFM	4,000 CFM	3,900 CFM	3,800 CFM	5.6	2
460V/3Ph	PEHCPRDLADB46C PEHCPRDLACEN46C	PEHCPRDLADB46M PEHCPRDLACEN46M					2.8	

PARTS INCLUDED	QTY.
#10 x 1/2 Sheet Metal Screw	22
3/16" Dia x 25' Pressure Tubing (w/Modulating Option Only)	1
Pressure Connection Port (w/Modulating Option Only)	1
VFD Instruction Booklet (w/Modulating Option Only)	1

3847 Wabash Drive
Mira Loma, CA 91752

Ph: (951) 685-1101 Fax: (619) 872-9799

ILL. 1

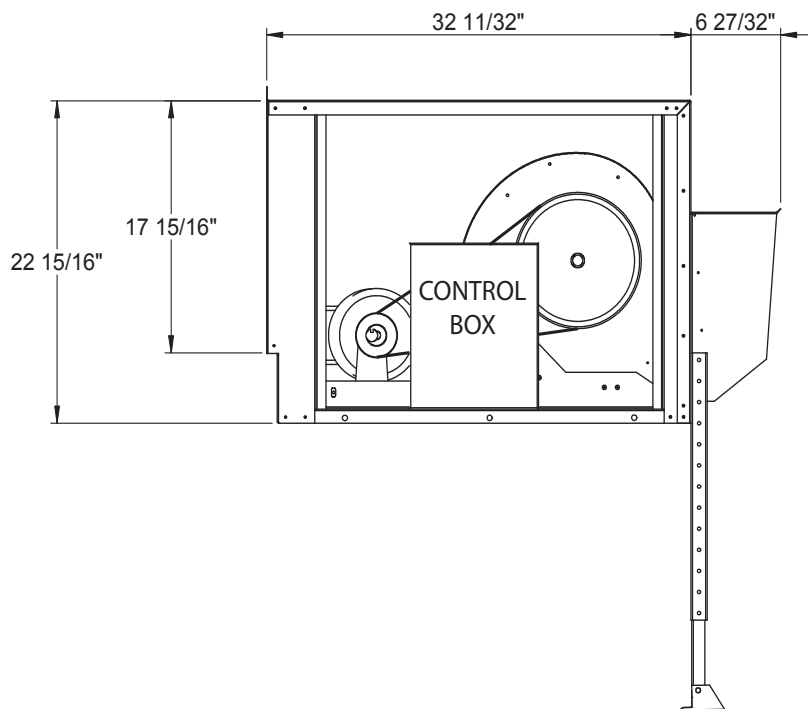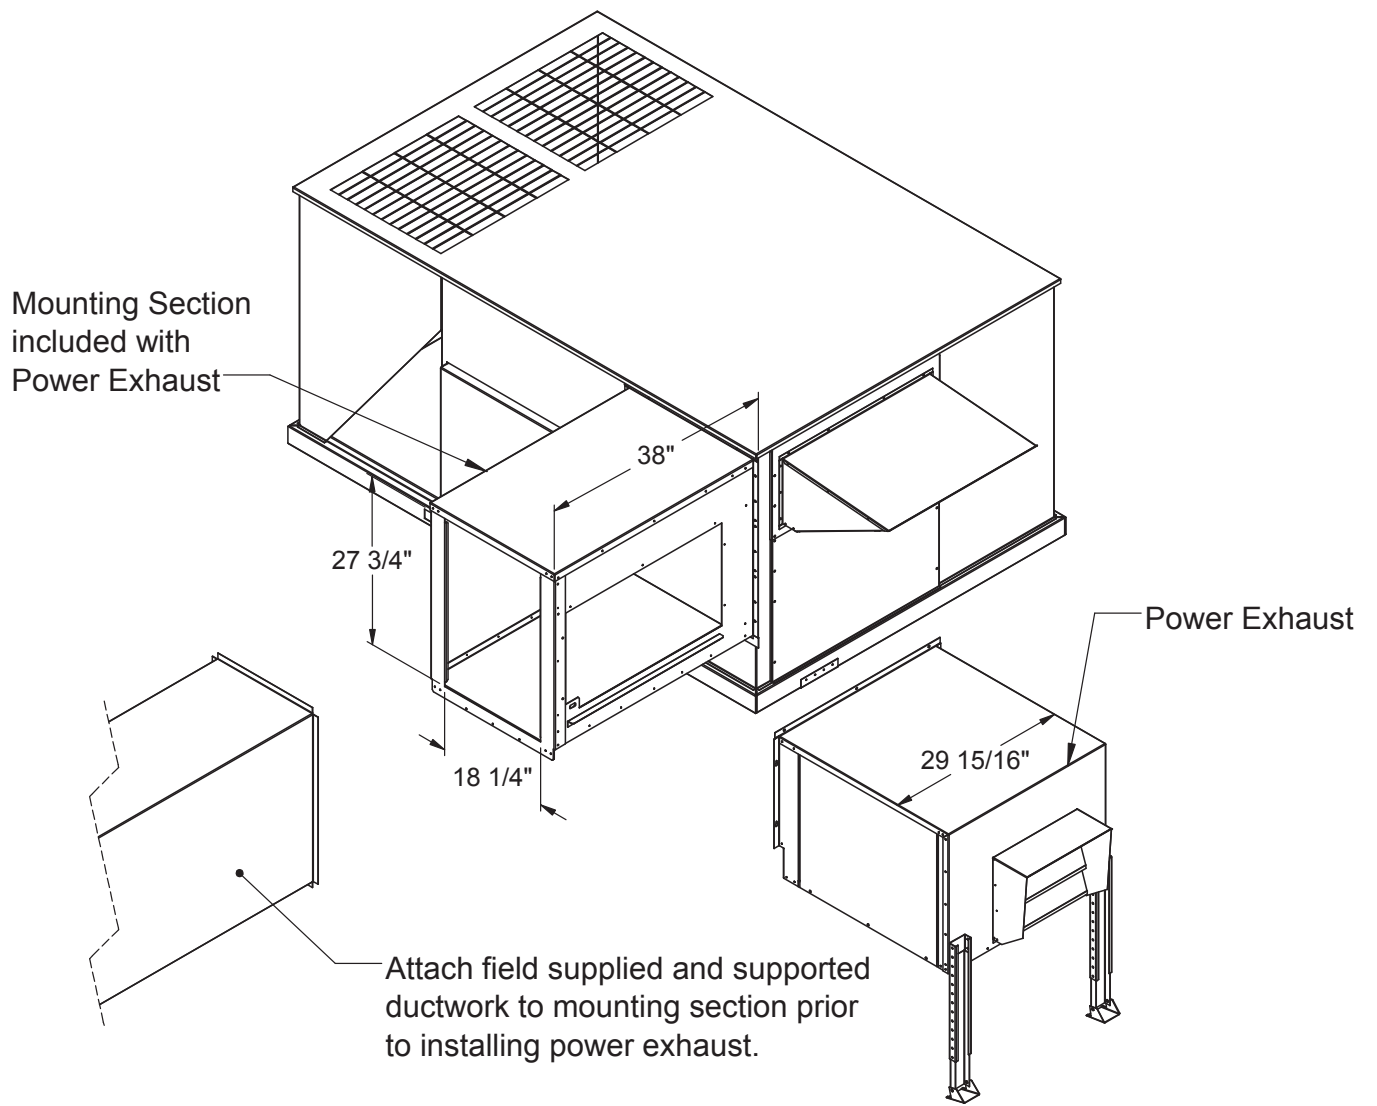

Installation Instructions

Important

Exhaust hood is shipped loose inside the power exhaust cabinet.
Remove exhaust hood prior to installing power exhaust.

1. Install economizer per instructions. The power exhaust power cord is located on over exhaust cabinet. Make sure to connect Molex plug to unit when installing economizer. (ILL. 2)

2. Install mounting section over return air opening and secure to unit using existing screws from factory return air opening panel. Caulk all mating flanges water tight. (ILL. 3)

3. Attach and support field supplied return air duct to mounting section. This step must be completed prior to attaching power exhaust to mounting section. (ILL. 3)

4. Feed the power exhaust power cord thru the return air damper frame to knockout on mounting section. (ILL. 4)


5. Set power exhaust in front of mounting section. Feed the end of the power cord thru 7/8" knockout at the economizer frame thru the wire race way on the economizer. (ILL. 2 & 3)

6. For constant volume operation, feed 24V yellow wire leads through economizer return air damper knockout. Connect wires to Economizer JADE Logic board (C, EXH1) or SSE Controller (COM, EX-FAN). (ILL. 2) (Not required for modulating operation.)


7. Install power exhaust over mounting section opening and secure with 1/4" bolts provided. Caulk all mating flanges water tight. (ILL. 3)

Based on return air duct supports, power exhaust may require field support.


8. Reattach lower mixed air panel below outside air hood.

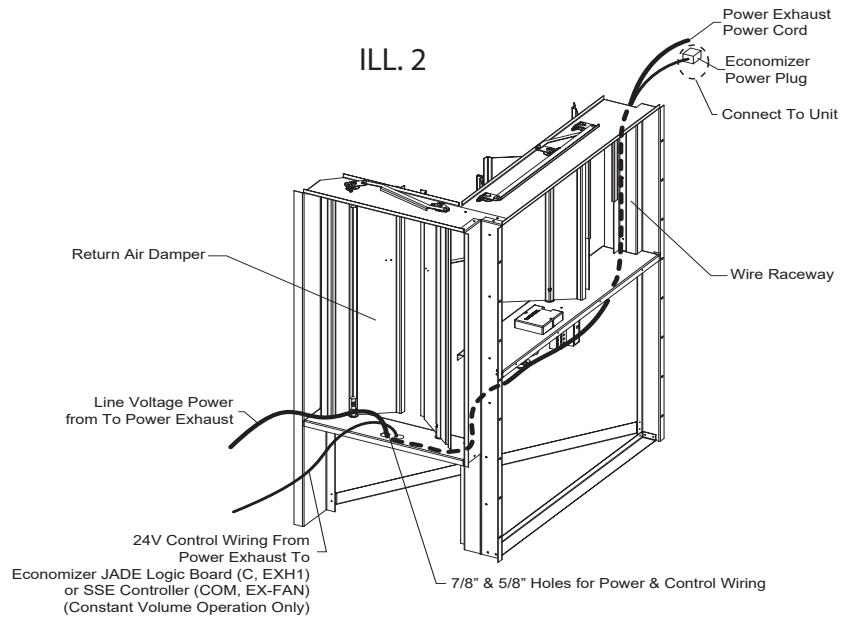

ILL. 3

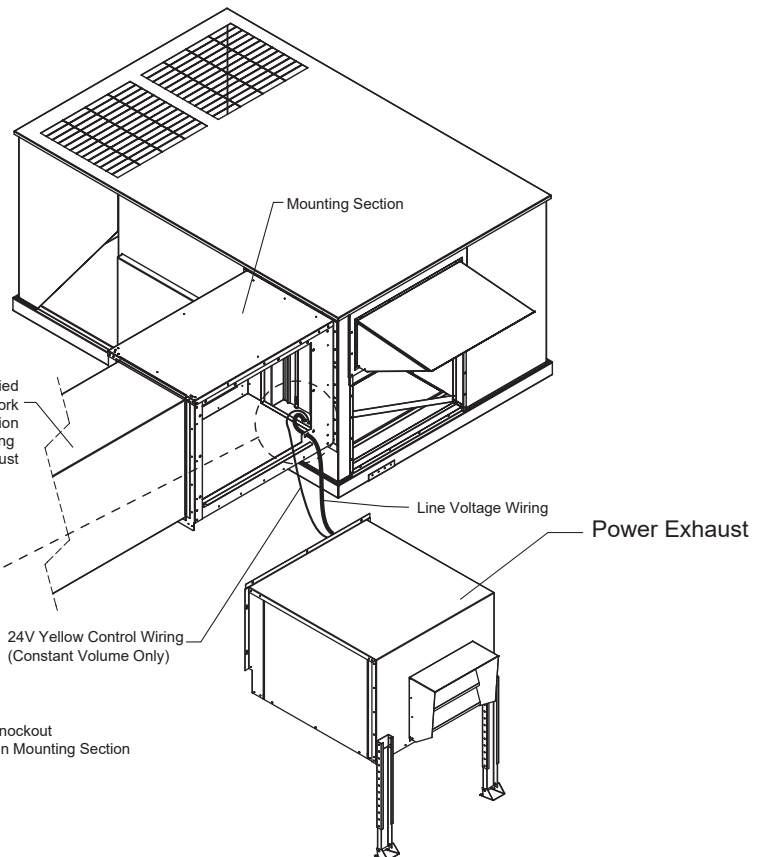

ILL. 4

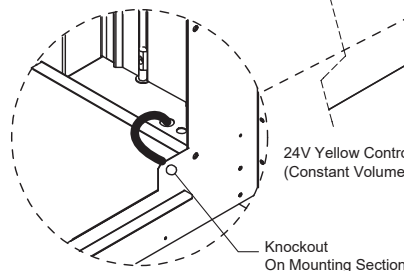


Installation Instructions (When Used With Pre-installed ProVent Economizer Only)

1. Remove existing ProVent economizer from unit.
2. On bottom of return air damper frame, bore a 7/8" diameter hole for the power cord and a 5/8" diameter hole for the 24V control wiring. (ILL. 2)
3. Feed power cord end thru the 7/8" diameter hole. (ILL. 2)

Feed the power cord thru wire race way on economizer. This end will be connected to a dedicated field supplied disconnect. (ILL. 2)

4. Follow instructions 1 thru 8 from previous section on Page 2.

ILL. 5 - Constant Volume Power Exhaust Wiring

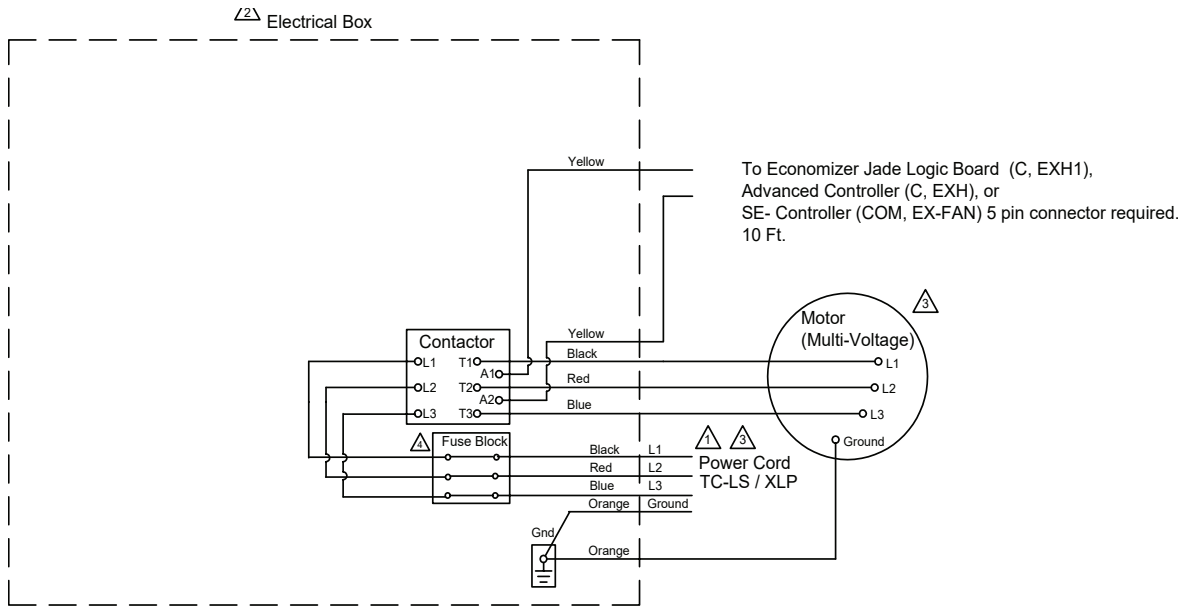

⚠ Power Supply. Provide disconnect means and circuit protection as required. See power exhaust name plate for electrical ratings. If local codes allow connecting to the HVAC unit power, make sure the disconnect and incoming wiring are sized to handle the load of both the HVAC unit and the power exhaust.

To determine MCA with power exhaust: $\text{New MCA} = \text{MCA of Unit Only} + \text{MCA of Power Exhaust}$

- ⚠ Transformer, contactor and fuses are to be in a NEMA type electrical enclosure.
- ⚠ For voltage, refer to label on exterior of power exhaust cabinet.
- ⚠ For fuse size, refer to label on exterior of power exhaust cabinet.


Example: With a unit that has MCA=22.5 amps and MOCP=30 amps,

$\text{New MCA} = 22.5 \text{ amps} + 3 \text{ amps (example for power exhaust)} = 25.5 \text{ amps}$

If New MCA is less than MOCP for the HVAC unit, you can tie the power wire to the HVAC contactor terminal strip, if local code allows. Make sure tap off terminal block is capable for handling more than one unit.

If new MCA is greater than MOCP or local code requires, you must run power wire for the power exhaust to an external disconnect. Make sure the disconnect is sized properly for the power from the power exhaust as well as the HVAC unit.

ILL. 6 - Modulating Power Exhaust Option Wiring

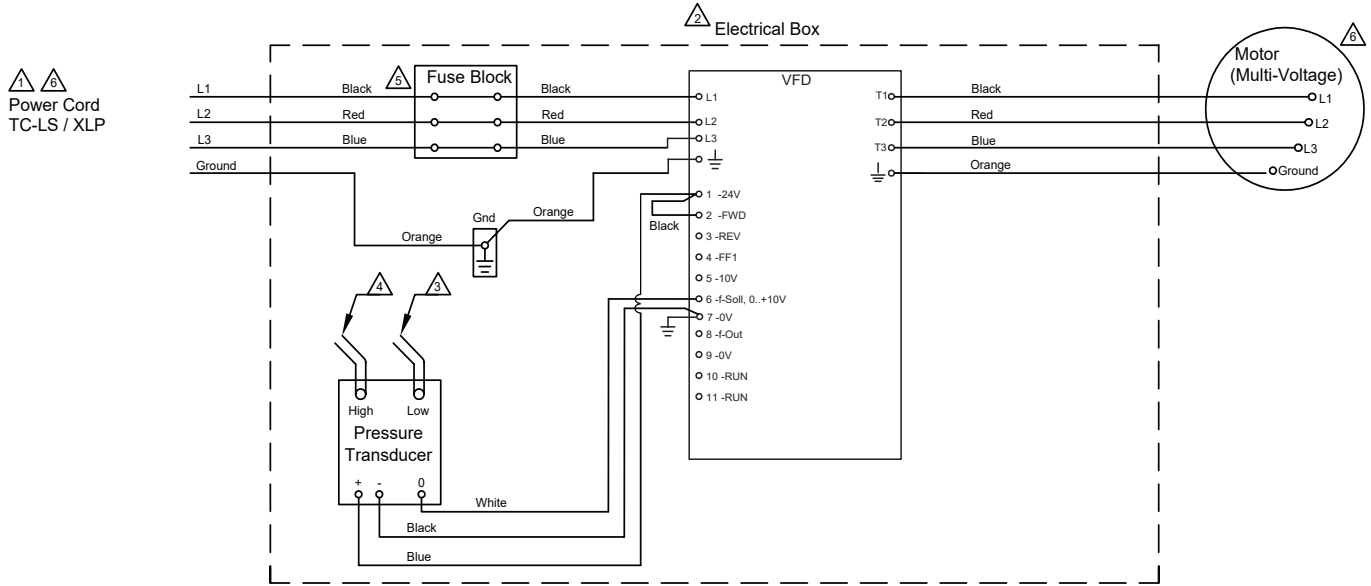

⚠ Power Supply. Provide disconnect means and circuit protection as required. See power exhaust name plate for electrical ratings. If local codes allow connecting to the HVAC unit power, make sure the disconnect and incoming wiring are sized to handle the load of both the HVAC unit and the power exhaust.

To determine MCA with power exhaust: $\text{New MCA} = \text{MCA of Unit Only} + \text{MCA of Power Exhaust}$

⚠ Transformer, contactor and fuses are to be in a NEMA type electrical enclosure.

⚠ Factory mounted 3/16" low pressure tubing.

⚠ 25 feet of 3/16" high pressure tubing and connection port provided for field mounting in conditioned space. Architectural finishing field provided. (Follow local codes).

⚠ For fuse size, refer to label on the exterior of power exhaust cabinet.

⚠ For Voltage, refer to label on exterior of power exhaust cabinet.

⚠ Field Required.

If the Power Exhaust is installed with the Simplicity Smart Equipment (SSE) board, please change the following fan type settings:

Details <enter>

Control <enter>

Power Ex <enter>

Ex FType <enter>

select "Non- Modulating" <enter>

To change the setpoints for "ON" and "OFF"

EconDmpPos- FanOn <60% default>

EconDmpPos- FanOff <20% default>

The motor/blower is connected to a motor controller (VFD) that varies the speed to maintain an acceptable conditioned space pressure. The power exhaust system includes a low pressure transducer that compares room pressure to atmospheric. This transducer sends a signal to the motor controller (VFD) which varies the motor frequency in order to provide pressure relief.

1. Install 3/16" pressure tubing as per wiring diagram making sure it is not located near any S/A or R/A diffuser or door.
2. The VFD is factory preprogrammed to accept the 0 to 10 VDC signal through the pressure transducer.

Table 1 - Pressure vs. VFD Frequency

Transducer Output Signal (VDC)	Conditioned Space Pressure (Inch W.G.)	VFD Setting (Hz)
0	0	0
1	0.01	10
2	0.02	20
3	0.03	30
4	0.04	40
5	0.05	50
6	0.06	60
7	0.07	70
8	0.08	80
9	0.09	90
10	0.10	100

VFD is factory set at 0.04 inches w.g. To change setting, press and hold "OK" to access the programming menu; up/down to display P-45, hit "OK" move arrows up/down to set desired frequency that determines pressure requirement, then press "OK" to save parameter.